


Warning: Read the accompanying operating instructions carefully before initial use!

Activating:

The following steps need to be carried out within **5 seconds**:

1. Pull the STOP switch ①.
2. Shortly press the start button ② and then release. The transmitter will switch off if the button is pressed for longer than half a second.
3. Press the start button again and keep it actuated until the status LED ③ flashes green. Then release the button.

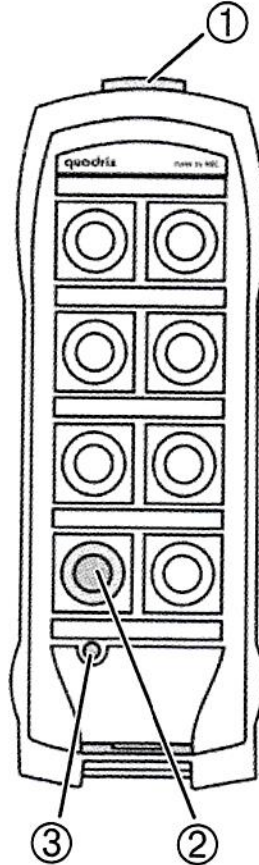

Note:

The transmitter switches off if

- the start button is pressed for longer than half a second in step 2 of the start sequence.
- the start sequence is not completed within 5 seconds.
- another button is pressed during the start sequence.

In such cases, press the STOP switch and repeat the entire start sequence!

Deactivating:

Press the STOP switch ①.